


# Digital-Messschieber ELORA-Nr. 1517 Bedienungsanleitung

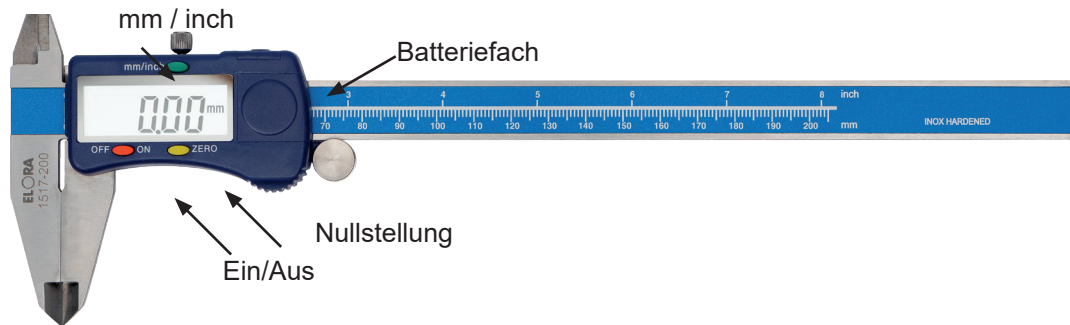


1. Maßstabkörper sauber halten. Verhindern Sie das Eindringen von Flüssigkeit in die Anzeigeeinheit, da sonst die Elektronik zerstört wird.
2. Die Oberfläche kann mit Pflege-, Reinigungsmittel (kein Aceton oder Alkohol verwenden) gereinigt werden. Die Metallteile mit etwas Maschinenöl einfetten.
3. Bei Lagerung sowie längerer Nichtbenutzung bitte die Batterie aus dem Batteriefach nehmen!
4. Sonstige Bedienungshinweise wie bei einem herkömmlichen Messschieber.
5. Beim Batteriewechsel kann passieren, dass die Elektronik auf Grund falscher Reset-Signale nicht richtig funktioniert. In diesem Fall nehmen Sie die Batterie heraus und setzen sie nach ca. 30 Sek. wieder ein.

## Fehlerbehandlung

Fehler	Ursache	Behebung
die Zahlen blinken	Batteriespannung ist unter 1,45 V	Batterie wechseln
das Display zählt nicht weiter	Stromkreisfehler	Batterie heraus nehmen und nach ca. 30 Sek. wieder einlegen
Messfehler ist zu gross (<0,1 mm)	Schmutz auf der Abtastfläche	Abdeckung und Platine abschrauben und die Abtastfläche säubern
keine Anzeige	Batterie hat schlechten Kontakt oder Batterie ist leer	Batterie richtig einlegen oder Batterie wechseln



# Digital Vernier Caliper ELORA-Nr. 1517 Operating Instruction

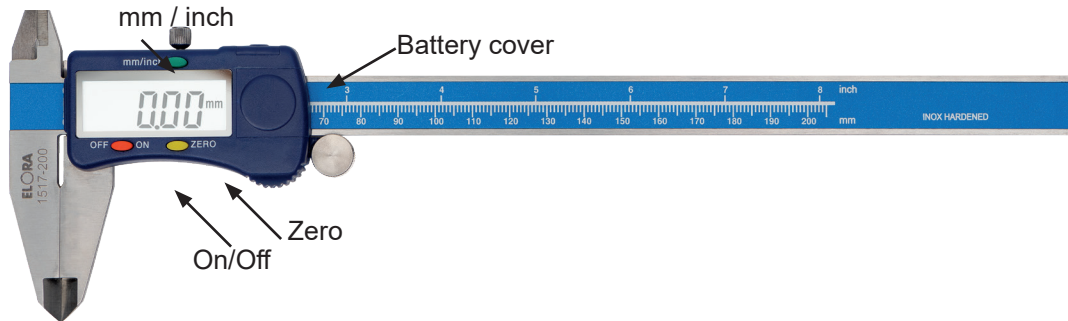

1. Kepp body face clean, prevent liquid material from getting into slider to destroy electronics.
2. Face should be cleaned gently with cotton fabric. Never use petrol, acetone or alcohol.
3. By storage or no using for a long time, please take the battery out from the caliper.
4. Other notes refer to conventional caliper.
5. Accidental wrong display may happen while replacing the battery. Just take out the battery and then put it in again after more than 30 seconds until the display return to normal.

## Trouble Shooting

Error	Reason	Solution
five digits jump simutaneously once per sec.	Battery voltage is lower than 1,45V	replace the battery
Display doesn't change when the slider is moved	circuit error	put out the battery and set it again after 30 sec.
Reading error is more than 0,1 mm	Dirt in the sensor	remove the slider cover and clean the face of sensor
no display	Battery in poor contact or battery voltage is unde 1,4V	remove battery cover and adjust the battery seat or replace battery

